 



 

 
 
 
 
 
 

 
 
 

 


 
 

 

 
 
 
 
 

 

 
 
 
 
 
 
 
 

 

 

 
 
 
 
 

 

 



 
 
 

 

 





Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Info		Info
	Recall		Back
	EPG		Guide
	Audio		Dual
	Subtitle		Subt

Originalfernbedienung Ersatzfernbedienung

	TV / Radio		TV/R
	Menu		Menu
	Exit		Exit
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	OK		Ok
	Record		Rec
	Stop		Stop
	Vol +		Vol +
	Vol -		Vol -
	TTX		Text
	FAV		Pre Ch
	CH +		Ch +
	CH -		Ch -
	Media		Media





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	USB		Smart				
	I<< Prev		I<<				
	Next >>I		>>I				
	Play		Play				
	Pause		Pause				
	<< Rew		<<				
	Fwd >>		>>				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				

