









 









 


 


 

 

Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	FAV		Pre Ch
	SUB		Subt
	Menu		Menu
	EPG		Guide
	Info		Info

Originalfernbedienung Ersatzfernbedienung

	Exit		Exit
	Up / CH+		Up
	Up / CH+		Ch +
	Down / CH-		Down
	Down / CH-		Ch -
	Left		Left
	OK		Ok
	Right		Right
	Vol+		Vol +
	Vol-		Vol -
	ALT / <<		Smart
	ALT / <<		<<
	List / >>		List
	List / >>		>>
	Red / I<< / Lang		Red
	Red / I<< / Lang		I<<
	Red / I<< / Lang		Dual



