



Originalfernbedienung Ersatzfernbedienung

|   |        |   |                             |
|---|--------|---|-----------------------------|
|    | Power  |    | Power                       |
|    | 1      |    | 1                           |
|    | 2      |    | 2                           |
|    | 3      |    | 3                           |
|    | 4      |    | 4                           |
|    | 5      |    | 5                           |
|    | 6      |    | 6                           |
|    | 7      |    | 7                           |
|    | 8      |    | 8                           |
|    | 9      |    | 9                           |
|   | FAV    |   | Fav / Marker / PC           |
|  | 0      |  | 0                           |
|  | TXT    |  | Text / Goto                 |
|  | Red    |  | Red / Netflix / Search      |
|  | Green  |  | Green / APP / Repeat        |
|  | Yellow |  | Yellow / YouTube / Repeat   |
|  | Blue   |  | Blue / Prime Video / Random |

Originalfernbedienung Ersatzfernbedienung

|   |        |   |                       |
|---|--------|---|-----------------------|
|    | CEC    |    | Smart / List          |
|    | ?      |    | D.Menu / Top          |
|    | Exit   |    | Exit / Cancel / Clear |
|    | Menu   |    | Menu / Home           |
|    | Up     |    | Up                    |
|    | Back   |    | Back / Return         |
|    | Left   |    | Left                  |
|    | OK     |    | OK                    |
|    | Right  |    | Right                 |
|    | Down   |    | Down                  |
|   | Guide  |   | Guide / EPG / -/-     |
|  | Tools  |  | Setup / OPT /         |
|  | Vol+   |  | Vol+                  |
|  | Source |  | AV / Input / RDS      |
|  | PR+    |  | CH+ / Page+           |
|  | Vol-   |  | Vol-                  |
|  | Mute   |  | Mute / Dimmer         |



