 




 
 
 
 

 

 

 
 
 
 
 


 



 

 
 
 
 

 

 




 


 
 

 
 
 

 
 
 










Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Pre Ch
	Sleep		Sleep
	Screen		Format
	Lang		Dual
	Subttl		Subt
	PIP		3D

Originalfernbedienung Ersatzfernbedienung


 

 

	EPG		Guide
	FAV		Shift + Pre Ch
	Presets		Media
	[≡]/Text		Text
	Mute		Mute
	Source		AV
	Menu		Menu
	Info/?		Info
	Return		Back
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Vol-		Vol -
	Vol+		Vol +
	P+		Ch +





## Originalfernbedienung

## Ersatzfernbedienung

	P-		Ch -
	Red/Up		Red
	Green/Down		Green
	Yellow		Yellow
	Blue		Blue

## Originalfernbedienung

## Ersatzfernbedienung