


 


 

 












 

 









 


 




 

 

 



 
 


 

 
 

 





 

 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Red/Sound		Red
	Green/Picture		Green
	Yellow/Feature		Yellow
	Blue/Install		Blue
	[≡]		Text
	[≡O]		Options
	[≡+]		Format
	[≡X]		Smart
	[.≡]/[■]		Subt
	[≡◆]/[■]		Media
	[≡?]/↓		3D
	[≡i]/↑		List
	1		1
	2		2
	3		3
	4		4


Originalfernbedienung Ersatzfernbedienung

	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	P<P		Pre Ch
	-/--		Guide
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	P+		Ch +
	P-		Ch -
	I-II		Dual
	[i]		Info
	TV		TV/R
	AV		AV





Originalfernbedienung   Ersatzfernbedienung

	PP		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	M		Menu

Originalfernbedienung   Ersatzfernbedienung