











 

 






 

















Originalfernbedienung Ersatzfernbedienung

|   |           |   |                       |
|---|-----------|---|-----------------------|
|    | Power     |    | Power                 |
|    | Mute      |    | Mute / Dimmer         |
|    | TV → HDD  |    | TV/Radio /            |
|    | Doc       |    | Picture / Format      |
|    | Disc      |    | D.Menu / Top          |
|    | Input     |    | AV / Input / RDS      |
|    | Input     |    | Smart / List          |
|    | <<        |    | << / Tune-            |
|    | >>        |    | >> / Tune+            |
|    | Stop      |    | Stop / Hold           |
|  | Up / CH+  |  | CH+ / Page+           |
|  | Up / CH+  |  | Up                    |
|  | Pause     |  | Pause / Step / Freeze |
|  | Left / V- |  | Left                  |
|  | Left / V- |  | Vol-                  |
|  | OK / Play |  | Play / Slow           |
|  | OK / Play |  | OK                    |

Originalfernbedienung Ersatzfernbedienung

|   |            |   |                 |
|---|------------|---|-----------------|
|    | Right / V+ |    | Vol+            |
|    | Right / V+ |    | Right           |
|    | I<         |    | I<< / Preset-   |
|    | >I         |    | >>I / Preset+   |
|    | Down / CH- |    | Down            |
|    | Down / CH- |    | CH- / Page-     |
|    | Rec        |    | Rec / Rec Mode  |
|    | [ i ]      |    | Info / Angle    |
|    | P / 1      |    | Display / Media |
|    | Menu       |    | Menu / Home     |
|  | ⊖          |  | Sleep / Timer   |
|  | 1          |  | 1               |
|  | 2          |  | 2               |
|  | 3          |  | 3               |
|  | 4          |  | 4               |
|  | 5          |  | 5               |
|  | 6          |  | 6               |




**Originalfernbedienung**
**Ersatzfernbedienung**

|  |          |  |                      |
|--|----------|--|----------------------|
|  | 7        |  | 7                    |
|  | 8        |  | 8                    |
|  | 9        |  | 9                    |
|  | Repeat   |  | Green / APP / Repeat |
|  | 0        |  | 0                    |
|  | Zoom     |  | Zoom / Size          |
|  | Language |  | Audio / Lang I/II    |
|  | [...]    |  | Subtitle / EQ        |
|  | Angle    |  | Shift + Info / Angle |
|  |          |  |                      |
|  |          |  |                      |
|  |          |  |                      |
|  |          |  |                      |
|  |          |  |                      |
|  |          |  |                      |
|  |          |  |                      |
|  |          |  |                      |
|  |          |  |                      |
|  |          |  |                      |
|  |          |  |                      |

**Originalfernbedienung**
**Ersatzfernbedienung**

|  |  |
|--|--|
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |

