
 



















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Guide		Guide / EPG / -/--
	Tv Input		AV / Input / RDS
	AV Input		Shift + AV / Input / RDS
	Menu		Menu / Home
	Text		Text / Goto
	[≡◆]/STTL		Subtitle / EQ
	[+]/Aspect		Picture / Format
	i		Info / Angle
	Exit		Exit / Cancel / Clear
	Netflix		Shift + Red / Netflix /
	APPS		Smart / List
	Left		Left
	Up		Up
	Right		Right
	Home		Shift + Menu /
	OK		OK

Originalfernbedienung Ersatzfernbedienung

	Option		Setup / OPT /
	Down		Down
	Back/Return		Back / Return
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Vol+		Vol+
	Mute		Mute / Dimmer
	PR+		CH+ / Page+
	Vol-		Vol-
	PR-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5





Originalfernbedienung Ersatzfernbedienung

	6		6
	7		7
	8		8
	9		9
	?/Help		D.Menu / Top
	0		0
	Last View		Fav / Marker / PC
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	I<<		I<< / Preset-
	Pause		Pause / Step / Freeze
	>>I		>>I / Preset+
	Stop		Stop / Hold
	Rec		Rec / Rec Mode

Originalfernbedienung Ersatzfernbedienung

