






 
 

 


 

 
 
 

 
 



 



 
 








 

 





 
 
 
 
 
 
 
 
 
 



**Originalfernbedienung Ersatzfernbedienung**

|                                                                                     |                  |                                                                                     |       |
|-------------------------------------------------------------------------------------|------------------|-------------------------------------------------------------------------------------|-------|
|    | Power            |    | Power |
|    | Stop             |    | Stop  |
|    | Pause            |    | Pause |
|    | Play             |    | Play  |
|    | I<< Track/Search |    | I<<   |
|    | Track/Search >>I |    | >>I   |
|    | Menu             |    | Menu  |
|    | Return           |    | Back  |
|    | Up               |    | Up    |
|    | Down             |    | Down  |
|    | Right            |    | Right |
|  | Left             |  | Left  |
|  | Enter            |  | Ok    |
|  | 1/Subtitle       |  | 1     |
|  | 2/Audio          |  | 2     |
|  | 3/Angle          |  | 3     |
|  | 4/Random         |  | 4     |

**Originalfernbedienung Ersatzfernbedienung**

|                                                                                     |                     |                                                                                     |         |
|-------------------------------------------------------------------------------------|---------------------|-------------------------------------------------------------------------------------|---------|
|  | 5/Scan              |  | 5       |
|  | 6/Repeat            |  | 6       |
|  | 7                   |  | 7       |
|  | 8                   |  | 8       |
|  | 9                   |  | 9       |
|  | 0                   |  | 0       |
|  | Aspect              |  | Format  |
|  | Game                |  | Smart   |
|  | DVD Menu            |  | D. Menu |
|  | OSD/Track           |  | Text    |
|  | Title/Title Chapter |  | Options |
|                                                                                     |                     |                                                                                     |         |
|                                                                                     |                     |                                                                                     |         |
|                                                                                     |                     |                                                                                     |         |
|                                                                                     |                     |                                                                                     |         |

