

 



 



 

 



 






 




 

 







Originalfernbedienung Ersatzfernbedienung


 

 

 

 

 

 

 

 

 

 





 

 

 




	Off / On		Power
	CD Program		Shift + Sleep
	Sleep		Sleep
	Muting -20dB		Mute
	Tuner 1		1
	Tuner 2		2
	Tuner 3		3
	Tuner 4		4
	Tuner 5		5
	Tuner 6		6
	Tuner 7		7
	Tuner 8		8
	Tuner 9		9
	Tuner 0		0
	Volume +		Vol +
	Volume -		Vol -
	Easy Play CD		Shift + 1



Originalfernbedienung Ersatzfernbedienung

	Easy Play Tape		Shift + 2
	Easy Play Tuner		Shift + 3
	CD Play		Play
	CD Pause		Pause
	CD Stop		Stop
	CD I<<		I<<
	CD >>I		>>I
	Turntable Play Reverse		Left
	Turntable Stop		Ok
	Tape Deck 1 / 2		Dual
	Tape Pause		Shift + Pause
	Tape <<		Shift + <<
	Tape >>		Shift + >>
	Tape Play		Shift + Play
	Tape Stop		Shift + Stop
	Tape Play		Shift + Left





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	1 Tape		1
	2 Tape		2
	3 Tape		3
	4 Tape		4
	5 Tape		5
	6 Tape		6
	7 Tape		7
	8 Tape		8
	9 Tape		9
	0 Tape		0
	Tape		Smart
	Power Tape		Power
	Play Tape		Play
	I<</<< Tape		<<
	I<< Tape		I<<
	>>/>>I Tape		>>
	>>I Tape		>>I

Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Stop Tape		Stop





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Tuner		TV/R				
	Power Tuner		Power				
	1 Tuner		1				
	2 Tuner		2				
	3 Tuner		3				
	4 Tuner		4				
	5 Tuner		5				
	6 Tuner		6				
	7 Tuner		7				
	8 Tuner		8				
	9 Tuner		9				
	0 Tuner		0				
	<</<<		<<				
	>>/>>		>>				

