


**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	SD Card		Shift + Media
	Input TV		Shift + AV
	Input AV		AV
	Menu		Menu
	Aspect		Format
	Viera Cast		Shift + Smart
	Direct TV Rec		Shift + Rec
	i		Info
	Exit		Exit
	Viera Tools		Smart
	Viera Link		Media
	Guide		Guide
	Up		Up
	Left		Left
	OK		Ok
	Right		Right

**Originalfernbedienung Ersatzfernbedienung**

	Down		Down
	Option		Options
	Back/Return		Back
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Text		Text
	STTL		Subt
	Index		Shift + Info
	Hold		Shift + Stop
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6





