

 
 





 

 





 





 

 

 

 














 
 

 
 
 
 
 







Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------|---|---------------|
|  | Power |  | Power |
|  | Open/Close |  | Eject |
|  | Status |  | AV |
|  | PIP |  | 3D |
|  | Audio |  | Dual |
|  | Miracast |  | TV/R |
|  | Internet |  | Shift + Media |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------------------|---|---------|
|  | # |  | Guide |
|  | */Cancel |  | Format |
|  | << |  | << |
|  | Play |  | Play |
|  | >> |  | >> |
|  | I<< |  | I<< |
|  | Pause |  | Pause |
|  | >>I |  | >>I |
|  | Stop |  | Stop |
|  | [...]/CC |  | Subt |
|  | X/Exit |  | Exit |
|  | Pop-Up Menu/Top Menu |  | Menu |
|  | Netflix |  | Media |
|  | Home |  | Smart |
|  | Option |  | Options |
|  | Return |  | Back |
|  | Up |  | Up |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------|--|---------------|
|  | Down |  | Down |
|  | Right |  | Right |
|  | Left |  | Left |
|  | OK |  | Ok |
|  | Red |  | Red |
|  | Green |  | Green |
|  | Yellow |  | Yellow |
|  | Blue |  | Blue |
|  | Power Tv |  | Shift + Power |
|  | AV Input Tv |  | Shift + AV |
|  | Tv Vol+ |  | Vol + |
|  | Tv Vol- |  | Vol - |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

