

 


 











Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Menu		Menu
	Guide		Guide
	Input Tv		TV/R
	Input AV		AV
	i		Info
	X/Exit		Exit
	APPS		Media
	Netflix		Shift + Media
	Home		Smart
	Option		Options
	Back/Return		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok

Originalfernbedienung Ersatzfernbedienung

	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Text		Text
	STTL		Subt
	Aspect		Format
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	CH+		Ch +
	CH-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5



