












 



 

 

 


 
 



 



 





 










Originalfernbedienung Ersatzfernbedienung


 



 





	Power		Power
	Input		AV
	i		Info
	[G]		Guide
	*1		Format
	Home		Smart
	Netflix		Media
	*2		3D
	Exit		Exit
	Back		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Red		Red
	Green		Green

Originalfernbedienung Ersatzfernbedienung

	Yellow		Yellow
	Blue		Blue
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	P+		Ch +
	P-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Lang		Dual				
	TXT		Text				
	<<		<<				
	Play		Play				
	>>		>>				
	Stop		Stop				
	Pause		Pause				
	Rec		Rec				

