
 

 
 
 

 




Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Computer		Comp / Video
	HDMI		Mode
	3D		3D / Invert
	S-Video		Shift + Mode
	Video		Shift + Comp / Video
	Freeze		Freeze / Timer
	Image		Help / Info
	Up / Keystone+		Up
	Down / Keystone-		Down
	Left		Left
	Input		Source
	Menu		Menu
	Menu		Enter
	Mute		Blank / Mute
	AV Mute		Shift + Blank / Mute
	Right		Right

Originalfernbedienung Ersatzfernbedienung

	Auto ADJ		Auto
	Aspect		Eco / Aspect
	Vol-		Vol - / Page -
	Vol+		Vol + / Page +

