



Originalfernbedienung Ersatzfernbedienung

	POWER		Power
	POWER ON	 + 	Shift + Power
	FUNCTION 1		1
	FUNCTION 2		2
	FUNCTION 3		3
	RETURN		Back / Return
	MENU		Menu / Home
	UP		Up
	LEFT		Left
	ENTER		OK
	RIGHT		Right
	DOWN		Down
	DEFAULT		Smart / List
	FREEZE		Pause / Step / Freeze
	INPUT NEXT		AV / Input / RDS
	LENS		Display / Media
	SLEEP		Sleep / Timer

Originalfernbedienung Ersatzfernbedienung

	ASPECT	 + 	Shift + Picture / Format
	PICTURE MODE		Picture / Format
	MEMORY LOAD		CH+ / Page+
	WAVE FORM		CH- / Page-
	PICTURE		D.Menu / Top
	COLOR M.		Setup / OPT /

