



Originalfernbedienung	Ersatzfernbedienung
	Power
	+ Shift + Power
	Sleep / Timer
	Mute / Dimmer
	1
	2
	3
	Display / Media
	4
	5
	6
	7
	8
	9
	0
	TV/Radio /

Originalfernbedienung	Ersatzfernbedienung
	Exit / Cancel / Clear
	Green / APP / Repeat
	Blue / Prime Video / Random
	Shift + 5
	Shift + 3
	Shift + 6
	Shift + 7
	Subtitle / EQ
	Smart / List
	<< / Tune-
	I<< / Preset-
	>>I / Preset+
	>> / Tune+
	Sound / Title
	Left
	Down
	CH- / Page-



Program

