



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Sleep		Sleep / Timer
	Auto Off		Blue / Prime Video / Random
	Display		Display / Media
	Clock/Timer		Shift + Sleep / Timer
	Dimmer		Shift + Mute / Dimmer
	Timer Play/Rec		Rec / Rec Mode
	Disc		D.Menu / Top
	1		1
	2		2
	3		3
	Program		TV/Radio /
	4		4
	5		5
	6		6
	Play Mode		Picture / Format
	7		7

Originalfernbedienung Ersatzfernbedienung

	8		8
	9		9
	Repeat		Green / APP / Repeat
	Del		Exit / Cancel / Clear
	0		0
	>10		Guide / EPG / -/-
	Play/Pause CD		Play / Slow
	Tuner/Band		Shift + 6
	Stop/Clear		Stop / Hold
	<> Tape		Pause / Step / Freeze
	AUX		Shift + 7
	Vol-		Vol-
	Vol+		Vol+
	←Album		<< / Tune-
	Album→		>> / Tune+
	I<</Down/Rew		I<< / Preset-
	I>>/Up/FF		I>> / Preset+





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Intro		Menu / Home				
	Marker		Fav / Marker / PC				
	Title Search		Yellow / YouTube / Repeat				
	Enter		OK				
	S.Sound EQ		Text / Goto				
	Re-Master		Subtitle / EQ				
	Sound		Sound / Title				
	Muting		Mute / Dimmer				

