
 





 









 





 








 













 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV / Input / RDS
	Teletext		Text / Goto
	[1!2]		Setup / OPT /
	Subtitle		Subtitle / EQ
	Format		Picture / Format
	Green		Green / APP / Repeat
	Red/Demo		Red / Netflix / Search
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Guide		Guide / EPG / -/--
	Info		Info / Angle
	Up		Up
	Down		Down
	Left		Left
	Right		Right
	Ok		OK

Originalfernbedienung Ersatzfernbedienung

	Back		Back / Return
	Menu		Menu / Home
	Vol+		Vol+
	Vol-		Vol-
	P+		CH+ / Page+
	P-		CH- / Page-
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0





Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung
MHEG CANCEL	MHEG Cancel
PC FAV MARKER	Exit / Cancel / Clear
PC FAV MARKER	Fav / Marker / PC

Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung

