



**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Open / Close		Eject / Surround
	AUX / MP3 Link		Shift + 7
	Radio		Shift + 6
	Radio		TV/Radio /
	USB		Shift + 8
	DOCK		Shift + 2
	Disc		Shift + 3
	Info		Info / Angle
	Up		Up
	Left/Left		Left / Tune-
	Left/Left		Left
	OK		OK
	Right/Right		Right / Tune+
	Right/Right		Right
	Menu/Back		Back / Return
	Menu/Back		Menu / Home

**Originalfernbedienung    Ersatzfernbedienung**

	Down		Down
	Options		Setup / OPT /
	I<		I<< / Preset-
	Play/pause		Play / Slow
	>I		>>I / Preset+
	Mute		Mute / Dimmer
	Stop		Stop / Hold
	Vol+		Vol+
	Surround		Shift + Eject / Surround
	Sound Modes+		CH+ / Page+
	Vol-		Vol-
	Sound Modes-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5



