






















 


 

 






Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Power		Power
	Mute		Mute
	Timer		AV
	Clear		Exit
	Display		Info
	Volume+		Vol +
	Volume-		Vol -
	Up		Up
	Left /  << / <<		Left
	Left /  << / <<		<<
	Left /  << / <<		I<<
	Play / Pause		Ok
	Play / Pause		Play
	Play / Pause		Pause
	Right / >>  / >>		Right
	Right / >>  / >>		>>
	Right / >>  / >>		>>I

