




 













 

 
















Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0/10		0
	FAV/Program		Pre Ch
	Recall/10+		Back
	P.Mode		Format
	S.Mode		Shift + Dual
	Sleep		Sleep

Originalfernbedienung Ersatzfernbedienung

	Tv/Radio		TV/R
	Display		Info
	Menu		Menu
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	EPG		Guide
	Media		Media
	CH+		Ch +
	CH-		Ch -
	Rec		Rec


 

 






**Originalfernbedienung    Ersatzfernbedienung**

	T.Shift		Smart
	I/II/Audio		Dual
	Size/Aspect		3D
	D.Setup		Options
	D.Menu		D. Menu
	Title		Text
	Eject		Eject
	Play		Play
	Pause/Hold		Pause
	Stop/Reveal		Stop
	<</Text		<<
	>>/Subpage		>>
	I<</Index		I<<
	>>I/Mix		>>I
	Zoom		Shift + Eject
	Subtitle		Subt
	Red/Goto		Red

**Originalfernbedienung    Ersatzfernbedienung**

	Green/A-B		Green
	Yellow/Angle		Yellow
	Blue/Repeat		Blue

