
























 









Originalfernbedienung Ersatzfernbedienung

|   |         |   |                  |
|---|---------|---|------------------|
|    | Power   |    | Power            |
|    | S.Mode  |    | Sound / Title    |
|    | MTS     |    | Text / Goto      |
|    | P.Mode  |    | Picture / Format |
|    | Caption |    | Subtitle / EQ    |
|    | Sleep   |    | Sleep / Timer    |
|    | P.Size  |    | Zoom / Size      |
|    | 1       |    | 1                |
|    | 2       |    | 2                |
|    | 3       |    | 3                |
|   | 4       |   | 4                |
|  | 5       |  | 5                |
|  | 6       |  | 6                |
|  | 7       |  | 7                |
|  | 8       |  | 8                |
|  | 9       |  | 9                |
|  | 0       |  | 0                |

Originalfernbedienung Ersatzfernbedienung

|   |       |   |                       |
|---|-------|---|-----------------------|
|    | Jump  |    | Smart / List          |
|    | .     |    | Display / Media       |
|    | Mute  |    | Mute / Dimmer         |
|    | Input |    | AV / Input / RDS      |
|    | Vol+  |    | Vol+                  |
|    | Vol-  |    | Vol-                  |
|    | CH+   |    | CH+ / Page+           |
|    | CH-   |    | CH- / Page-           |
|    | Guide |    | Guide / EPG / -/-     |
|    | Exit  |    | Exit / Cancel / Clear |
|   | Up    |   | Up                    |
|  | Down  |  | Down                  |
|  | Down  |  | Shift + Down          |
|  | Left  |  | Left                  |
|  | OK    |  | OK                    |
|  | Info  |  | Info / Angle          |
|  | Menu  |  | Menu / Home           |





Originalfernbedienung    Ersatzfernbedienung

|  |        |  |                             |
|--|--------|--|-----------------------------|
|  | Red    |  | Red / Netflix / Search      |
|  | Green  |  | Green / APP / Repeat        |
|  | Yellow |  | Yellow / YouTube / Repeat   |
|  | Blue   |  | Blue / Prime Video / Random |
|  | List   |  | Shift + Smart / List        |
|  | FAV CH |  | Fav / Marker / PC           |
|  | Timer  |  | Shift + Sleep / Timer       |
|  | Freeze |  | Pause / Step / Freeze       |
|  |        |  |                             |
|  |        |  |                             |
|  |        |  |                             |
|  |        |  |                             |
|  |        |  |                             |
|  |        |  |                             |
|  |        |  |                             |
|  |        |  |                             |
|  |        |  |                             |
|  |        |  |                             |
|  |        |  |                             |
|  |        |  |                             |

Originalfernbedienung    Ersatzfernbedienung

|  |  |  |  |
|--|--|--|--|
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |

