




 

























 













 

 

 

 


 

 
 
 










 
### Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	AV/Source		AV / Input / RDS
	0		0
	Exit		Exit / Cancel / Clear
	-/--		Shift + Guide / EPG / -/--
	CH+		CH+ / Page+
	[i]/Info		Info / Angle

### Originalfernbedienung Ersatzfernbedienung

	Vol+		Vol+
	CH-		CH- / Page-
	I-II		Audio / Lang I/II
	Vol-		Vol-
	Up		Up
	Left		Left
	OK/Select		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	TV/DTV		TV/Radio /
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	[≡]/Text		Text / Goto
	[≡o]		Sleep / Timer





**Originalfernbedienung   Ersatzfernbedienung**

The image shows a black Mandis Shop remote control. At the top, there are four buttons: a red power button, a black DIMMER MUTE button, and a yellow SHIFT button. Below these are four blue buttons labeled TV, DVD, SAT, and AUX. The TV button has sub-labels SLOW, STEP-FREEZE, HOLD, and REC MODE. The DVD button has sub-labels TUNE-, TUNE+, PRESET-, and PRESET+. The SAT button has sub-labels TUNE-, TUNE+, PRESET-, and PRESET+. The AUX button has sub-labels TUNE-, TUNE+, PRESET-, and PRESET+. Below these are four more buttons: SOUND, AUDIO, SUBTITLE, and PROGRAM. The SOUND button has sub-labels FORMAT, SIZE, TIMER, and PROGRAM. The AUDIO button has sub-labels PICTURE, ZOOM, SLEEP, and TV/RADIO. The SUBTITLE button has sub-labels TOP MENU, OPT-TOOLS, GOTO, and RDS. The PROGRAM button has sub-labels D.MENU, SETUP, TEXT, and AV INPUT. Below these are four more buttons: HOME, MENU, INFO, and ANGLE. The HOME button has sub-labels CLEAR, EXIT, CANCEL, and LIST. The MENU button has sub-labels SMART, MEDIA, and DISPLAY. The INFO button has sub-labels TV, DVD, CD-STS, VIDEO, TAPE, and TUNER. The ANGLE button has sub-labels AUX-HDD, USB, and BLUETOOTH. Below these are four more buttons: +VOL, -VOL, +CH PAGE, and -CH PAGE. The +VOL button has sub-labels TV, DVD, CD-STS, VIDEO, TAPE, and TUNER. The -VOL button has sub-labels AUX-HDD, USB, and BLUETOOTH. The +CH PAGE button has sub-labels TV, DVD, CD-STS, VIDEO, TAPE, and TUNER. The -CH PAGE button has sub-labels AUX-HDD, USB, and BLUETOOTH. Below these are four more buttons: 1, 2, 3, 4, 5, 6, 7, 8, 9, 0. The 1 button has sub-labels TV, DVD, CD-STS, VIDEO, TAPE, and TUNER. The 2 button has sub-labels AUX-HDD, USB, and BLUETOOTH. The 3 button has sub-labels TV, DVD, CD-STS, VIDEO, TAPE, and TUNER. The 4 button has sub-labels AUX-HDD, USB, and BLUETOOTH. The 5 button has sub-labels TV, DVD, CD-STS, VIDEO, TAPE, and TUNER. The 6 button has sub-labels AUX-HDD, USB, and BLUETOOTH. The 7 button has sub-labels TV, DVD, CD-STS, VIDEO, TAPE, and TUNER. The 8 button has sub-labels AUX-HDD, USB, and BLUETOOTH. The 9 button has sub-labels TV, DVD, CD-STS, VIDEO, TAPE, and TUNER. The 0 button has sub-labels TV, DVD, CD-STS, VIDEO, TAPE, and TUNER. Below these are four more buttons: GUIDE EPG, HDMI-SAT, PC, and FAV MARKER. The GUIDE EPG button has sub-labels TV, DVD, CD-STS, VIDEO, TAPE, and TUNER. The HDMI-SAT button has sub-labels AUX-HDD, USB, and BLUETOOTH. The PC button has sub-labels TV, DVD, CD-STS, VIDEO, TAPE, and TUNER. The FAV MARKER button has sub-labels AUX-HDD, USB, and BLUETOOTH. At the bottom, there are four buttons: NETFLIX, APP, YouTube, and Prime Video. Below these are four buttons: SEARCH, REPEAT, REPEAT A-B, and RANDOM. The remote also features a central navigation pad with an OK button and a bottom section with streaming service buttons (Netflix, App, YouTube, Prime Video) and search/repeat functions.