

 

 

 



 

 



 

 













 

 



 

 

 







Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|-----------------------|
|  | Power |  | Power |
|  | Sleep |  | Sleep / Timer |
|  | Mute |  | Mute / Dimmer |
|  | Mode |  | AV / Input / RDS |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | Eject/Nicam2 |  | Eject / Surround |
|  | Eject/Nicam2 |  | Sound / Title |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | TXT/MIX |  | Text / Goto |
|  | Play/Pause |  | Play / Slow |
|  | Play/Pause |  | Pause / Step / Freeze |
|  | 7 |  | 7 |
|  | 8 |  | 8 |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------------|---|-----------------------|
|  | 9 |  | 9 |
|  | Stop/Exit/Cancel |  | Exit / Cancel / Clear |
|  | Stop/Exit/Cancel |  | Stop / Hold |
|  | -/-- |  | Guide / EPG / -/-- |
|  | 0 |  | 0 |
|  | Back |  | Back / Return |
|  | SYS Menu |  | Menu / Home |
|  | Rec |  | Rec / Rec Mode |
|  | Up |  | Up |
|  | CH+ |  | CH+ / Page+ |
|  | DTV/Radio |  | TV/Radio / |
|  | Left |  | Left |
|  | Enter |  | OK |
|  | Right |  | Right |
|  | Vol- |  | Vol- |
|  | Down |  | Down |
|  | CH- |  | CH- / Page- |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|---------------|--|----------------------------|
| | Vol+ | | Vol+ |
| | Return | | Shift + Back / Return |
| | Menu DVD | | D.Menu / Top |
| | Setup | | Setup / OPT / |
| | Display | | Display / Media |
| | Search/FAV | | Shift + Red / Netflix / |
| | Search/FAV | | Fav / Marker / PC |
| | Slow/EPG | | Shift + Play / |
| | Slow/EPG | | Shift + Guide / EPG / -/- |
| | Language/Info | | Audio / Lang I/II |
| | Language/Info | | Info / Angle |
| | Zoom/List | | Zoom / Size |
| | Zoom/List | | Smart / List |
| | Red/Angle | | Red / Netflix / Search |
| | Red/Angle | | Shift + Info / Angle |
| | Green/Program | | Green / APP / Repeat |
| | Green/Program | | Shift + TV/Radio / Program |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|---------------|--|-----------------------------|
| | Yellow/Repeat | | Shift + Green / APP / |
| | Yellow/Repeat | | Yellow / YouTube / Repeat |
| | Blue/A-B | | Blue / Prime Video / Random |
| | Blue/A-B | | Shift + Yellow / YouTube / |
| | <</Hold | | Shift + Stop / |
| | <</Hold | | << / Tune- |
| | >>/Index | | >> / Tune+ |
| | I<</Size | | I<< / Preset- |
| | I<</Size | | Shift + Zoom / |
| | >>I/Reveal | | >>I / Preset+ |
| | Subtitle | | Subtitle / EQ |
| | Title/Subpage | | Shift + Sound / Title |
| | FAV- | | Shift + Down |
| | FAV+ | | Shift + Up |

