

 

 

 



 

 



 

 













 

 

 






 

 

 



 

 

 

 





 

 





Originalfernbedienung Ersatzfernbedienung

| | | | |
|-------------------------------------------------------------------------------------|--------------|-------------------------------------------------------------------------------------|-----------------------|
|  | Power |  | Power |
|  | Sleep |  | Sleep / Timer |
|  | Mute |  | Mute / Dimmer |
|  | Mode |  | AV / Input / RDS |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | Eject/Nicam2 |  | Eject / Surround |
|  | Eject/Nicam2 |  | Sound / Title |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | TXT/MIX |  | Text / Goto |
|  | Play/Pause |  | Play / Slow |
|  | Play/Pause |  | Pause / Step / Freeze |
|  | 7 |  | 7 |
|  | 8 |  | 8 |



 

 



 

 

 



 

 

 

 







 
 
 

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---------------------------------------------------------------------------------------|------------------|---------------------------------------------------------------------------------------|-----------------------|
|  | 9 |  | 9 |
|  | Stop/Exit/Cancel |  | Exit / Cancel / Clear |
|  | Stop/Exit/Cancel |  | Stop / Hold |
|  | -/-- |  | Guide / EPG / -/-- |
|  | 0 |  | 0 |
|  | Back |  | Back / Return |
|  | SYS Menu |  | Menu / Home |
|  | Rec |  | Rec / Rec Mode |
|  | Up |  | Up |
|  | CH+ |  | CH+ / Page+ |
|  | DTV/Radio |  | TV/Radio / |
|  | Left |  | Left |
|  | Enter |  | OK |
|  | Right |  | Right |
|  | Vol- |  | Vol- |
|  | Down |  | Down |
|  | CH- |  | CH- / Page- |

 

 

 



 

 

 







 

 








Originalfernbedienung Ersatzfernbedienung

| | | | |
|-------------------------------------------------------------------------------------|---------------|-------------------------------------------------------------------------------------|----------------------------|
|  | Vol+ |  | Vol+ |
|  | Return |  | Shift + Back / Return |
|  | Menu DVD |  | D.Menu / Top |
|  | Setup |  | Setup / OPT / |
|  | Display |  | Display / Media |
|  | Search/FAV |  | Shift + Red / Netflix / |
|  | Search/FAV |  | Fav / Marker / PC |
|  | Slow/EPG |  | Shift + Play / |
|  | Slow/EPG |  | Shift + Guide / EPG / -/- |
|  | Language/Info |  | Audio / Lang I/II |
|  | Language/Info |  | Info / Angle |
|  | Zoom/List |  | Zoom / Size |
|  | Zoom/List |  | Smart / List |
|  | Red/Angle |  | Red / Netflix / Search |
|  | Red/Angle |  | Shift + Info / Angle |
|  | Green/Program |  | Green / APP / Repeat |
|  | Green/Program |  | Shift + TV/Radio / Program |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---------------------------------------------------------------------------------------|---------------|---------------------------------------------------------------------------------------|-----------------------------|
|  | Yellow/Repeat |  | Shift + Green / APP / |
|  | Yellow/Repeat |  | Yellow / YouTube / Repeat |
|  | Blue/A-B |  | Blue / Prime Video / Random |
|  | Blue/A-B |  | Shift + Yellow / YouTube / |
|  | <</Hold |  | Shift + Stop / |
|  | <</Hold |  | << / Tune- |
|  | >>/Index |  | >> / Tune+ |
|  | I<</Size |  | I<< / Preset- |
|  | I<</Size |  | Shift + Zoom / |
|  | >>I/Reveal |  | >>I / Preset+ |
|  | Subtitle |  | Subtitle / EQ |
|  | Title/Subpage |  | Shift + Sound / Title |
|  | FAV- |  | Shift + Down |
|  | FAV+ |  | Shift + Up |

