






 



 

 

 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0 / TV/SAT		0
	0 / TV/SAT		TV/R
	Audio		Dual
	Page+		>>I
	Page-		I<<
	Up		Up







Originalfernbedienung Ersatzfernbedienung

	Up		Ch +
	Down		Down
	Down		Ch -
	Left		Left
	Left		Vol -
	Right		Right
	Right		Vol +
	OK		Ok
	Menu		Menu
	Exit		Exit
	EPG		Guide
	i		Info
	Text		Text
	FAV / Red		Red
	FAV / Red		Pre Ch
	Sleep		Sleep
	AUD / Green		Green





Originalfernbedienung Ersatzfernbedienung

 RCL / Blue	 Blue
 LANG / Yellow	 Yellow
 LANG / Yellow	 Options

Originalfernbedienung Ersatzfernbedienung

