


































Originalfernbedienung Ersatzfernbedienung

Off		Power
Mute		Mute / Dimmer
Hold		Stop / Hold
Reveal		<< / Tune-
Sound		Sound / Title
A/B		Audio / Lang I/II
Subcode		Subtitle / EQ
<!>		Eject / Surround
earspnes		Picture / Format
Size		Zoom / Size
[.]		Sleep / Timer
Norm		TV/Radio /
Contrast		D.Menu / Top
Color		Setup / OPT /
Text		Text / Goto
AV		AV / Input / RDS
Brightness		Menu / Home

Originalfernbedienung Ersatzfernbedienung

Up / P+		Up
Left / Vol-		Left
OK		OK
Right / Vol+		Right
PS		Exit / Cancel / Clear
Down / P-		Down
P/C		Back / Return
Right / Vol+		Vol+
VT/TV		Smart / List
Up / P+		CH+ / Page+
Left / Vol-		Vol-
Display		Display / Media
Down / P-		CH- / Page-
1		1
2		2
3		3
4		4




















Originalfernbedienung Ersatzfernbedienung Originalfernbedienung Ersatzfernbedienung
















5		5		
6		6		
7		7		
8		8		
9		9		
--		Guide / EPG / --		
0		0		
Red		Red / Netflix / Search		
Green		Green / APP / Repeat		
Yellow		Yellow / YouTube / Repeat		
Blue		Blue / Prime Video / Random		
Mix		Shift + Text /		



Originalfernbedienung Ersatzfernbedienung

On/Off		Power
Mute		Mute / Dimmer
Update		Play / Slow
Reveal		Pause / Step / Freeze
Txt Stop		Stop / Hold
Color- S.Std		Sound / Title
Menu audio		Audio / Lang I/II
Subt.List		Subtitle / EQ
Surround		Eject / Surround
Txt Expand		Zoom / Size
Sleep Timer		Sleep / Timer
Return TV		TV/Radio /
Menu video		D.Menu / Top
On/Tim		Setup / OPT /
Text		Text / Goto
Menu		Menu / Home
Menu Up		Up

Originalfernbedienung Ersatzfernbedienung

Info		Info / Angle
Menu Left		Left
OK Enter		OK
Menu Right		Right
Menu Off		Exit / Cancel / Clear
Menu Down		Down
Back		Back / Return
Volume+		Vol+
Display		Smart / List
Chan.Up		CH+ / Page+
Volume-		Vol-
Disp		Display / Media
Chan.Down		CH- / Page-
1		1
2		2
3		3
4		4



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
5			
6			
7			
8			
9			
Guide -/-- 1.			
0/10			
2.Fav P/C 2.			
Red			
Green			
Yellow			
Blue			
Nicam/Mono			
Level L			
Level R/Woofers			
Audio+			

