
 
 

 

 

 

 
 






Originalfernbedienung Ersatzfernbedienung








 

 
 
 





 
 




 


 



 



 
 


 



 
 



 
 

 
 
 

 

 

 

 
 
	Power		Power
	Phono		1
	AUX 1		3
	Tape 1		4
	Tape 2		5
	Band		Smart
	A Tun		Ok
	< Tuning		Left
	Tuning >		Right
	Vol-		Vol -
	Vol+		Vol +
	On screen		Info
	CTR ECS		List
	< SRND Mode		Ch -
	SRND Mode >		Ch +
	BAL CHK		Dual
	< Delay Time		Down

Originalfernbedienung Ersatzfernbedienung

	Delay Time >		Up
	<< Tape		<<
	>> Tape		>>
	Rec Tape		Rec
	Stop Tape		Stop
	Pause Tape		Pause
	Play Tape		Play





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
 Power	 Power	 SRND Mode >	 Ch +
 Vol+	 Vol +	 BAL CHK	 Dual
 Vol-	 Vol -	 Delay Time >	 Up
 Phono	 1	 < Delay Time	 Down
 AUX1	 2	 Pause Tape	 Pause
 AUX 2	 3	 Play Tape	 Play
 Tape 1	 4	 Stop Tape	 Stop
 Tape 2	 5	 >> Tape	 >>
 Video 1	 6	 Rec/Zone	 Options
 Video 2	 7	 << Tape	 <<
 Video 3	 8	 Band	 Smart
 Off	 Exit	 Rec Tape	 Rec
 A Tun	 Ok	 On Screen	 Info
 Tuning >	 Right	 Tuner	 Media
 < Tuning	 Left		
 CTR ECS	 List		
 < SRND Mode	 Ch -		





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Band		Smart
	A Tun		Ok
	< Tuning		Left
	Tuning >		Right
	Vol-		Vol -
	Vol+		Vol +
	On Screen		Info
	CTR ECS		List
	< SRND Mode		Ch -
	SRND Mode >		Ch +
	BAL CHK		Dual
	< Delay Time		Down
	Delay Time >		Up
	<< Tape		<<
	>> Tape		Blue
	Rec Tape		Rec

Originalfernbedienung Ersatzfernbedienung

	Stop Tape		Stop
	Pause Tape		Pause
	Play Tape		Play

