 

 






 






 












 





 

 













 
 
 







 


 







Originalfernbedienung Ersatzfernbedienung

	Mute		Mute
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide
	AV		AV
	Menu		Menu
	Red		Red
	OK		Ok




 
 
 



 




Originalfernbedienung Ersatzfernbedienung

	Green		Green
	P:P		Pre Ch
	Yellow		Yellow
	Analog		Smart
	Blue		Blue
	Up		Up
	P+		Ch +
	P-		Ch -
	Down		Down
	Right		Right
	Vol+		Vol +
	Vol-		Vol -
	Left		Left
	Recall		Back
	Sleep		Sleep
	Status		3D
	Tv/TXT		Text





Originalfernbedienung Ersatzfernbedienung

STOP 	Stop		Stop
REVEAL 	Reveal		Media
SIZE 	Size		Format
MIX 	Mix		Options
INDEX 	Index		Info
SUBCODE 	Subcode		Subt
CANCEL 	Cancel		Shift + Back

Originalfernbedienung Ersatzfernbedienung

