



















 



 

 



 













Originalfernbedienung	Ersatzfernbedienung
 Mute	 Mute / Dimmer
 Power	 Power
 Sleep	 Sleep / Timer
 Vol+	 Vol+
 EQ	 Subtitle / EQ
 Timer	 Shift + Sleep / Timer
 Vol-	 Vol-
 Band	 D.Menu / Top
 Prog/Mem	 TV/Radio /
 Rand	 Blue / Prime Video / Random
 Intro	 OK
 Repeat	 Green / APP / Repeat
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Stop	 Stop / Hold

Originalfernbedienung	Ersatzfernbedienung
 Album/Presets-	 CH- / Page-
 Album/Presets+	 CH+ / Page+
 ST/Mono/Find	 Sound / Title

