
 


 

 
 
 



 
 


 







 

 


 





Originalfernbedienung Ersatzfernbedienung

On/Off		Power
Audio Off		Mute
Slow Down		Ch -
Stop		Stop
Auto/Track		Shift + Subt
Slow Up		Ch +
Subt.		Subt
Rep/A-B		Shift + Text
Pause		Pause
Title		Smart
DVD/TV		AV
Repeat/1/All		Text
Zoom		Eject
Menu		Menu
Menu Up		Up
Menu Left		Left
OK Enter		Ok

Originalfernbedienung Ersatzfernbedienung

Display		Info
Menu Right		Right
Menu Down		Down
Progr.		Sleep
Return		Back
Volume+		Vol +
Volume-		Vol -
1		1
2		2
3		3
Next		>>
4		4
Prev.		<<
5		5
Setup		Options
Top Menu		D. Menu
6		6



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
7	 7	Resume	 List
8	 8	3D	 3D
Pbc	 Media	Angle	 Format
R/L	 +  Shift + Dual		
9	 9		
+10	 Guide		
0	 0		
Np	 +  Shift + Smart		
Clear/00:00	 Exit		
C/CH	 Pre Ch		
Play	 Play		
Open/Close	 +  Shift + Mute		
Rewind	 <<		
Record	 Rec		
Audio	 Dual		
F.Forward	 >>		
Shuffle	 TV/R		

