



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Red/Zoom		Red
	Green/SAT		Green
	Yellow/Pause		Yellow
	Blue		Blue
	TV/RD		TV/R
	<<		<<
	Play		Play
	>>		>>
	Stop		Stop
	Pause		Pause
	Rec		Rec
	>>I		>>I
	I<<		I<<
	USB		AV
	Motor		Smart

Originalfernbedienung Ersatzfernbedienung

	F1		Media
	EPG		Guide
	Menu		Menu
	Exit		Exit
	Audio		Dual
	Info		Info
	FAV		Pre Ch
	Recall		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	CH+		Ch +
	CH-		Ch -





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
1	1	1	1				
2	2	2	2				
3	3	3	3				
4	4	4	4				
5	5	5	5				
6	6	6	6				
7	7	7	7				
8	8	8	8				
9	9	9	9				
0	0	0	0				
SUBTL	Subtl	AD SUBT	Subt				
TXT	TXT	REPEAT TEXT	Text				

