









 



























**Originalfernbedienung    Ersatzfernbedienung**

|   |          |   |                  |
|---|----------|---|------------------|
|    | Power    |    | Power            |
|    | Mute     |    | Mute / Dimmer    |
|    | 1        |    | 1                |
|    | 2        |    | 2                |
|    | 3        |    | 3                |
|    | Tv/Radio |    | TV/Radio /       |
|    | 4        |    | 4                |
|    | 5        |    | 5                |
|    | 6        |    | 6                |
|    | ↑        |    | CH+ / Page+      |
|    | 7        |    | 7                |
|    | 8        |    | 8                |
|   | 9        |   | 9                |
|  | ↓        |  | CH- / Page-      |
|  | 0        |  | 0                |
|  | ←PR      |  | Back / Return    |
|  | PAL/NTSC |  | Picture / Format |



 






 




**Originalfernbedienung    Ersatzfernbedienung**

|   |          |   |                       |
|---|----------|---|-----------------------|
|    | Pause    |    | Pause / Step / Freeze |
|    | EPG      |    | Guide / EPG / -/-     |
|    | Up/PR+   |    | Up                    |
|    | Menu     |    | Menu / Home           |
|    | Left     |    | Left                  |
|    | Vol-     |    | Vol-                  |
|    | OK/List  |    | OK                    |
|    | Right    |    | Right                 |
|    | Vol+     |    | Vol+                  |
|    | Info     |    | Info / Angle          |
|    | Down/PR- |    | Down                  |
|    | Exit     |    | Exit / Cancel / Clear |
|   | [+]      |   | Zoom / Size           |
|  | FAV      |  | Fav / Marker / PC     |
|  | Record   |  | Rec / Rec Mode        |
|  | Stop     |  | Stop / Hold           |
|  | Audio    |  | Audio / Lang I/II     |





**Originalfernbedienung Ersatzfernbedienung**

|   |           |   |                             |
|---|-----------|---|-----------------------------|
|  | TXT       |  | Text / Goto                 |
|  | Subtitle  |  | Subtitle / EQ               |
|  | Audio L/R |  | Sound / Title               |
|  | Red       |  | Red / Netflix / Search      |
|  | Green     |  | Green / APP / Repeat        |
|  | Yellow    |  | Yellow / YouTube / Repeat   |
|  | Blue      |  | Blue / Prime Video / Random |
|   |           |   |                             |
|   |           |   |                             |
|   |           |   |                             |
|   |           |   |                             |
|   |           |   |                             |
|   |           |   |                             |
|   |           |   |                             |
|   |           |   |                             |
|   |           |   |                             |
|   |           |   |                             |
|   |           |   |                             |
|   |           |   |                             |

**Originalfernbedienung Ersatzfernbedienung**

|  |  |  |  |
|--|--|--|--|
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |

