



 

 

 
 
 

 

 

 

 
 




 



 


 
 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	HDMI Control		Smart
	Rec		Rec
	Play		Play
	Pause		Pause
	Stop		Stop
	I<<		I<<
	<<		<<
	>>		>>
	>>I		>>I
	Screen		Format
	Lang		Dual
	Subtitle		Subt
	PIP / World		3D
	Red / Zoom		Red
	Green / Repeat		Green
	Yellow / Root		Yellow

Originalfernbedienung Ersatzfernbedienung

	Blue / Title		Blue
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Text		Text
	Swap		Pre Ch
	Up		Up
	Right		Right
	Down		Down
	Left		Left





Originalfernbedienung Ersatzfernbedienung

	OK		Ok
	P/CH +		Ch +
	P/CH -		Ch -
	Mute		Mute
	Vol +		Vol +
	Vol -		Vol -
	Menu		Menu
	Source		AV
	Return		Back
	EPG		Guide
	Info		Info
	Sleep		Sleep
	FAV	+	Shift + Pre Ch
	Angle / Media		Media
	Search Mode		TV/R
	Display	+	Shift + Info
	Presets		List

Originalfernbedienung Ersatzfernbedienung

