


 

 

 



 





 

 

 





 

 



 

 
 
 




 


 
 

 
 




 
 
 
 


 
 
 

 
 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Setup		Options
	DTV		D. Menu
	HDMI/AV		AV
	1		1
	Disk		List
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TTX		Text
	EPG		Guide













 


 
 




Originalfernbedienung Ersatzfernbedienung

	Movie		Red
	Music		Green
	Photo		Yellow
	Vol+		Vol +
	Vol-		Vol -
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Exit		Exit
	Home		Smart
	Edit		TV/R
	Copy		3D
	Repeat		Shift + Text
	Rec		Rec
	Play		Play





Originalfernbedienung Ersatzfernbedienung

	Pause		Pause
	Stop		Stop
	<</Rev		<<
	>>/FF		>>
	>>		>>
	<<		<<
	PG Up		Ch +
	Pg Dn		Ch -
	Audio		Dual
	Sub-T		Subt
	FAV		Pre Ch
	Info		Info
	Mute		Mute
	DVD		Blue
	Timer		Shift + AV
	T/R		Format

Originalfernbedienung Ersatzfernbedienung

