
 

 
 
 
 

 
 










 

 
 

 
 

 
 
 

 

 

 
 


 


 








 
 

 





 

 



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Power ON/Off		Power	
Vol Rs-/Effect		3D	
Sleep		Sleep	
Tape 2 Pre./eq		Options	
CD/Theater		Dual	
Funct./Direct		Smart	
CD Play		Play	
Tape 1 Hall/Ats		Subt	
CD Random		TV/R	
Repeat		Text	
Display		Info	
CD Rewind		<<	
CD F.FWD		>>	
CD Pause		Pause	
Volume+		Vol +	
Volume-		Vol -	
Pr 1		1	
Pr 2		2	
Pr 3		3	
Tape 1 F.FWD		>>	
6 Ch/Geq		List	
Tape 1 Play	 + 	Shift + Play	
Pr 4		4	
Pr 5		5	
Pr 6		6	
Store/Center-		Media	
Pr 7		7	
Pr 8		8	
Program		D. Menu	
Pr 9		9	
Mode		Guide	
Pr 0/10		0	










 



 
 
 


 


 



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Power ON/Off		Power	
Mute		Mute	
Tape 1 Stop	 + 	Shift + Stop	
Tape 2 Pre./eq	 	Options	
Input/Source	 	AV	
CD/Theater	 	Media	
Volume+	 	Vol +	
Tape 1 Hall/Ats	 	Info	
CD Play		Play	
CD Rewind		<<	
Funct./Direct	 	Menu	
Stop		Stop	
CD F.FWD		>>	
Volume-	 	Vol -	
Pr 1		1	
Pr 2		2	
Pr 3		3	
Pr 4		4	
Pr 5		5	
Phono/Scan	 	Smart	
Pr 6		6	
Tape 1 Rew	 + 	Shift + <<	
Tape 1 Play	 + 	Shift + Play	
Tape 1 F.FWD	 + 	Shift + >>	
Pr 7		7	
Tuner/Bypass		Down	
Pr 8		8	
Band		Up	
Fm Mode/Disc		Ok	



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Power ON/Off		Power	
Mute		Mute	
Every Pop		3D	
Preset Pause	 + 	Shift + Pause	
Vol Rs-/Effect		Subt	
Tape 1 Preset	 + 	Shift + List	
Sleep		Sleep	
Tape 1 Stop	 + 	Shift + Stop	
CD Random		Dual	
Vol Rs+/S.Mode	 + 	Shift + Menu	
Tape 2 Pre./eq		Back	
Repeat		Text	
CD/Theater		Options	
Woofers/Speed		0	
Input/Source		AV	
CD Play		Play	
Display		Info	
CD Rewind		<<	
Funct./Direct		Format	
Stop		Stop	
CD F.FWD		>>	
Volume+		Vol +	
CD Pause		Pause	
Volume-		Vol -	
Pr 1		1	
Next/Prog+		>>	
Mode		D. Menu	
Tape 1 Hall/Ats	 + 	Shift + Options	
Prev./Prog-		<<	
Program	 + 	Shift + Sleep	
Tape 1 Rec	 + 	Shift + Rec	
Tape 1 Rew	 + 	Shift + <<	
Tape 1 Play	 + 	Shift + Play	
Mark/Delete		Pre Ch	



Originalfernbedienung Ersatzfernbedienung


 








Tape 1 F.FWD	 + 	Shift + >>
Store/Center-	 + 	Shift + TV/R
Classic Track		9
Tune/Vol SW-		Ch -
Tune/Vol SW+		Ch +
Surround/Test		Guide
Pr 2		2
Erase/Snooze		Red
Pr 3		3
Timer/A.Track	 + 	Shift + AV
Search/Center		TV/R
Tape 2		Up
Track-/Echo	 + 	Shift + Ch -
Edit		Yellow
Track+/Karaoke	 + 	Shift + Ch +
Space/Default 3D	 + 	Shift + Green
Intro		Green

Originalfernbedienung Ersatzfernbedienung

Ubs/Check		Blue
X-Bass/Bgm	 + 	Shift + Red
Tuner/Bypass		Menu
Disc 4 Eject	 + 	Shift + 4
ON/Off	 + 	Shift + Power
Fm Mode/Disc		Smart
Center		List
Tape 2 REC./Jazz		Down
Disc 1 Eject	 + 	Shift + 1
Tape 2		Left
+10/Next Sv+V	 + 	Shift + Guide
Clear		Exit
Tape 2 FF/AudioR		Right
Tape 2		Ok
Disc 2	 + 	Shift + 2
Index+/Vol Ls+	 + 	Shift + Right
Disc 3 Eject	 + 	Shift + 3



Originalfernbedienung Ersatzfernbedienung

Eject		Eject
Band		Media
Index-/Vol Ls-	 + 	Shift + Left
Dimmer	 + 	Shift + Mute
Disc 5	 + 	Shift + 5
Aux/Video	 + 	Shift + Smart
6 Ch/Geq		6
Phono/Scan	 + 	Shift + Media

Originalfernbedienung Ersatzfernbedienung

