


 
















 
 
 


 

 

 


 



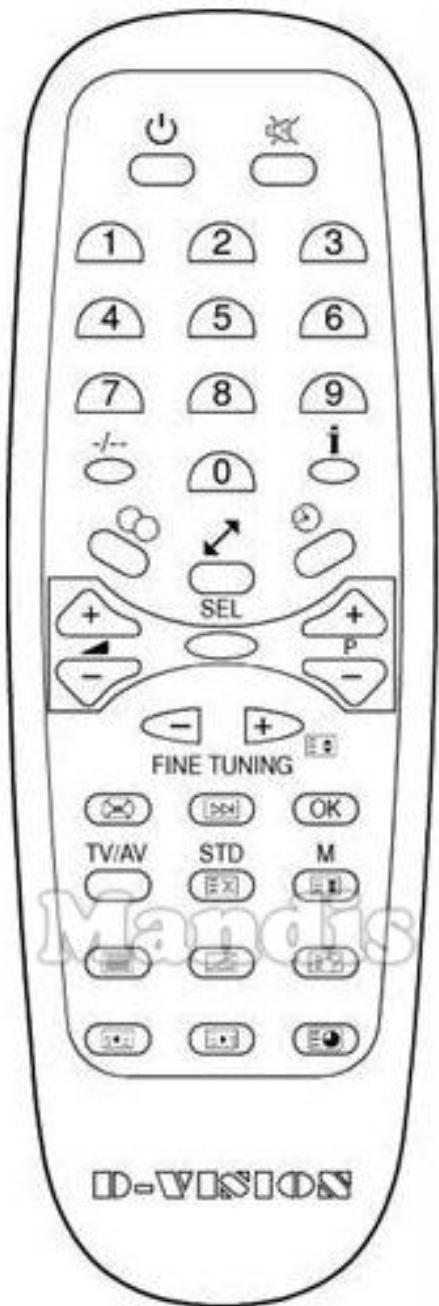

Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TV/AV		AV
	STD / [≡X]		Smart
	M		Media
	Text		Text
	[/≡]		D. Menu
	Reveal		TV/R
	[1<≡]		<<
	⊖ Sleep		3D




 
 
Originalfernbedienung Ersatzfernbedienung

	Vol+		Vol +
	Vol-		Vol -
	P+		Ch +
	P-		Ch -
	(X)		Exit
	>>I		>>I
	OK		Ok
	SEL		Menu
	Fine Tuing+		Right
	Fine Tuing-		Left
	TV/AV		AV
	STD / [≡X]		Smart
	M		Media
	Text		Text
	[/≡]		D. Menu
	Reveal		TV/R
	[1<≡]		<<





Originalfernbedienung Ersatzfernbedienung

	[≡>1]		>>
	[≡0]		Options
			

Originalfernbedienung Ersatzfernbedienung

