


























Originalfernbedienung Ersatzfernbedienung

On/Off		Power
Mute		Mute / Dimmer
Reveal		Play / Slow
Update		Pause / Step / Freeze
Txt Stop		Stop / Hold
Tune-		<< / Tune-
Tone+		>> / Tune+
Game Coo		<< / Preset-
Aft/Caf		Sound / Title
Menu audio		Audio / Lang I/II
Subt.List		Subtitle / EQ
Store		Eject / Surround
Browse		Picture / Format
Txt Expand		Zoom / Size
Sleep Timer		Sleep / Timer
Return TV		TV/Radio /
Menu video		D.Menu / Top

Originalfernbedienung Ersatzfernbedienung

Off/Tim		Setup / OPT /
Text		Text / Goto
TV/AV		AV / Input / RDS
Menu		Menu / Home
Menu Up		Up
Info		Info / Angle
Menu Left		Left
OK Enter		OK
Menu Right		Right
Menu Off		Exit / Cancel / Clear
Menu Down		Down
Back		Back / Return
Volume+		Vol+
Display		Smart / List
Chan.Up		CH+ / Page+
Volume-		Vol-
Disp		Display / Media



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Chan.Down	 CH- / Page-	Tune+	 Shift + >> /
1	 1	Mix Scan	 Shift + Text /
2	 2	Search	 Shift + Red / Netflix /
3	 3		
4	 4		
5	 5		
6	 6		
7	 7		
8	 8		
9	 9		
Guide -/-- 1.	 Guide / EPG / -/--		
0/10	 0		
2.Fav P/C 2.	 Fav / Marker / PC		
Red	 Red / Netflix / Search		
Green	 Green / APP / Repeat		
Yellow	 Yellow / YouTube / Repeat		
Blue	 Blue / Prime Video / Random		

