


 



 



 



 

 





 
 













Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	Play		Play
	[≡]		Text
	Pause/[/≡]		Pause
	Stop/[≡+]		Stop
	Rec/[≡◇]		Rec
	<</[≡o]		<<
	l<</[≡i]		l<<
	>> /[≡?]		>>
	>>/[≡x]		>>
	Info		Info
	EPG		Guide
	Subtitle		Subt
	Audio		Dual
	1		1
	2		2

Originalfernbedienung Ersatzfernbedienung

	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Menu		Menu
	Exit		Exit
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Back		Back
	Home/Source		Smart





Originalfernbedienung Ersatzfernbedienung

	Home/Source		AV
	Vol+		Vol +
	Vol-		Vol -
	List		List
	P+		Ch +
	P-		Ch -
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Zoom		Eject
	Rec.List		TV/R
	FAV		Pre Ch

Originalfernbedienung Ersatzfernbedienung

