



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TV		Smart
	Radio		TV/R
	Audio		Dual
	Info		Info
	Guide		Guide

Originalfernbedienung Ersatzfernbedienung

	[...]		Subt
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	P+		Ch +
	P-		Ch -
	Menu		Menu
	Quitter		Exit
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	[≡]		Text



