


 








 




 





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------|---|-------------------|
|  | Power |  | Power |
|  | Source |  | AV / Input / RDS |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | TV |  | TV/Radio / |
|  | 0 |  | 0 |
|  | Recall |  | Fav / Marker / PC |
|  | Vol+ |  | Vol+ |
|  | Mute |  | Mute / Dimmer |
|  | PR+ |  | CH+ / Page+ |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------|---|-----------------------|
|  | Vol- |  | Vol- |
|  | i/Info |  | Info / Angle |
|  | PR- |  | CH- / Page- |
|  | Menu |  | Menu / Home |
|  | Up |  | Up |
|  | Q.Menu |  | D.Menu / Top |
|  | Left |  | Left |
|  | OK |  | OK |
|  | Right |  | Right |
|  | Back |  | Back / Return |
|  | Down |  | Down |
|  | Exit |  | Exit / Cancel / Clear |
|  | World |  | Smart / List |
|  | Music Photo |  | Display / Media |
|  | Guide |  | Guide / EPG / -/-- |
|  | */o |  | Setup / OPT / |
|  | */o.. |  | Zoom / Size |





| Originalfernbedienung | | Ersatzfernbedienung | | Originalfernbedienung | | Ersatzfernbedienung | |
|-----------------------|--------|---------------------|-----------------------------|-----------------------|--|---------------------|--|
| | ≡/Text | | Text / Goto | | | | |
| | Red | | Red / Netflix / Search | | | | |
| | Green | | Green / APP / Repeat | | | | |
| | Yellow | | Yellow / YouTube / Repeat | | | | |
| | Blue | | Blue / Prime Video / Random | | | | |
| | Lang | | Audio / Lang I/II | | | | |
| | [≡].. | | Subtitle / EQ | | | | |
| | [-O-] | | Picture / Format | | | | |
| | << | | << / Tune- | | | | |
| | Pause | | Pause / Step / Freeze | | | | |
| | >> | | >> / Tune+ | | | | |
| | Rec | | Rec / Rec Mode | | | | |
| | Play | | Play / Slow | | | | |
| | Stop | | Stop / Hold | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |

