

 





 
 


 

 


 
 
 

 
 
 
 
 

 

 








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		SRC
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TTX/MIX		TEXT
	PRE-CH		P/C / FAV
	Vol+		VOL +
	Vol-		VOL -
	Mute		MUTE









 

 

 

 
 
 

 
 

 

Originalfernbedienung Ersatzfernbedienung

	P+		CH +
	P-		CH -
	CH List		TV/R
	Content		Shift + VOD
	Menu		MENU
	Guide		-/-- / EPG
	Tools		OPT+
	Info		INFO
	Return		BACK
	Exit		EXIT
	Up		UP
	Down		DOWN
	Right		RIGHT
	Left		LEFT
	Enter		OK
	Red		Red (A)
	Green		Green (B)





Originalfernbedienung Ersatzfernbedienung

	Yellow		Yellow (C)
	Blue		Blue (D)
	Media. P		MEDIA
	Internet/@TV		VOD
	Dual I-II		Audio
	AD		WIDE
	P.Size		V-FOR
	Subt.		Subt.
	<<		Rewind
	Pause		Pause
	>>		Fast Forward
	Rec		Rec
	Play		Play
	Stop		Stop

Originalfernbedienung Ersatzfernbedienung

