
















 



 
 
 

 


 




 
 
 
 

 

 

 

 



 




Originalfernbedienung Ersatzfernbedienung

 



 
 

 
 

 


	Power		Power
	OK		OK
	Up		UP
	Down		DOWN
	Right		RIGHT
	Left		LEFT
	Return		BACK
	Play		Play
	Pause		Pause
	Extra		MEDIA
	Mute		MUTE
	Vol+		VOL +
	Vol-		VOL -
	Guide		-/-- / EPG
	CH+		CH +
	CH-		CH -
	Home		VOD

Originalfernbedienung Ersatzfernbedienung

	Source		SRC
	TTX/MIX		TEXT
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	PRE-CH		P/C / FAV
	Exit		EXIT
	Info		INFO
	Menu		MENU
	Red		Red (A)





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Green		Green (B)	
Yellow		Yellow (C)	
Blue		Blue (D)	
		TV/R	
Tools		OPT+	
Stop		Stop	
Rec		Rec	
<</ <<		Rewind	
>>/>>		Fast Forward	
CH List		WIDE	
AD/Subt.		Subt.	
E-Manual		Audio	

