






 

 









 

 









 
 






 



 



 


 








 

 
 
 
 

 
 




Originalfernbedienung Ersatzfernbedienung

	Standby/On		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Tv/DVD		TV/R
	Open/Close		Eject
	DTV/Analog		Smart
	Input Sel		AV
	Copy		Options
	Pause		Pause

Originalfernbedienung Ersatzfernbedienung

	I <<		I <<
	>> I		>> I
	Play		Play
	Stop		Stop
	<<		<<
	>>		>>
	Mute		Mute
	Prog+		Ch +
	Prog-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Menu		Menu
	Return		Back
	Exit		Exit
	Title List/Disc Menu		Media
	Play List/Title Menu		Shift + Menu
	Red		Red





Originalfernbedienung Ersatzfernbedienung

	Green		Green
	Yellow		Yellow
	Blue		Blue
	Guide		Guide
	Info		Info
	Subtitle		Subt
	Text		Text
	Tv/Radio		Sleep
	FAV List		Pre Ch
	Marker		Shift + Options
	Rec		Rec
	Audio		Dual
	Rec Mode		Shift + Rec
	Rec		Format
	Repeat		Shift + Text
	OK		Ok
	Up		Up

Originalfernbedienung Ersatzfernbedienung

	Down		Down
	Right		Right
	Left		Left
	USB		Shift + Media
	Timer		Shift + AV
	HDD		Shift + Smart




















 

 
















Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
INPUT SEL	Input Sel	TIMER	AV
1	1	1	1
2	2	2	2
3	3	3	3
4	4	4	4
5	5	5	5
6	6	6	6
7	7	7	7
8	8	8	8
9	9	9	9
0	0	0	0
PROG	Prog+	+ CH	Ch +
PROG	Prog-	- CH	Ch -
STANDBY/ON	Standby/On TV	POWER	Power
TV MUTE	Mute Tv	MUTE	Mute
TV VOL	Tv Vol+	+ VOL	Vol +
TV VOL	Tv Vol-	- VOL	Vol -






 



 





 





 
 
 
 

 
 
 

 

 





Originalfernbedienung Ersatzfernbedienung

	Standby/On		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Tv/DVD		TV/R
	Open/Close		Eject
	DTV/Analog		Smart
	Input Sel		AV
	Copy		Options
	Pause		Pause




 


 

 





 
 
 


 






 
 



Originalfernbedienung Ersatzfernbedienung

	<<		<<
	>>		>>
	Play		Play
	Stop		Stop
	<<		<<
	>>		>>
	Prog+		Ch +
	Prog-		Ch -
	Menu		Menu
	Return		Back
	Exit		Exit
	Title List/Disc Menu		Media
	Play List/Title Menu		Shift + Menu
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue


 
 

 





Originalfernbedienung Ersatzfernbedienung

	Guide		Guide
	Info		Info
	Subtitle		Subt
	Text		Text
	Tv/Radio		D. Menu
	FAV List		Pre Ch
	Marker		Shift + Options
	Rec		Rec
	Audio		Dual
	Rec Mode		Shift + Rec
	Rec		Format
	Repeat		Shift + Text
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left

Originalfernbedienung Ersatzfernbedienung

	USB		Shift + Media
	Timer		Shift + AV
	HDD		Shift + Smart

