








 




 

 

 
 
 
 
 
 

 

 




 




 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Power Tv		Shift + Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Tv/Radio		TV/R
	Pre-CH		Pre Ch
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute

Originalfernbedienung Ersatzfernbedienung

	CH+		Ch +
	CH-		Ch -
	CH List		List
	Tv Portal		Media
	Menu		Menu
	EPG		Guide
	Tools		Options
	Info		Info
	Return		Back
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Red		Red
	Green		Green




**Originalfernbedienung    Ersatzfernbedienung**

	Yellow		Yellow
	Blue		Blue
	Text		Text
	Audio		Dual
	SUB		Subt
	Rec		Rec
	<<		<<
	Pause		Pause
	Play		Play
	Stop		Stop
	>>		>>

**Originalfernbedienung    Ersatzfernbedienung**