 

 




 

 

 
 
 


 
 
 
 
 
 

 

 
 
 
 
 
 




 

 
 


 
 

 

 
 
 

 
 

 




 

 

 


 
 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Bonusview		Media
	Open / Close		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Subtitle		Subt
	Audio		Dual
	l<<		l<<
	>>l		>>l

Originalfernbedienung Ersatzfernbedienung

	<<		<<
	>>		>>
	Stop		Stop
	Play		Play
	Pause		Pause
	Disc Menu		D. Menu
	Menu		Menu
	Popup / Title		Shift + Menu
	Popup / Title		List
	Tools		Options
	Info		Info
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Return		Back





**Originalfernbedienung Ersatzfernbedienung**

	Exit		Exit
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Smart HUB		Smart
	Search		TV/R
	Repeat		Text
	TV Power		Shift + Power
	TV Source		AV
	TV Vol +		Vol +
	TV Vol -		Vol -
	TV Mute		Mute
	TV CH +		Ch +
	TV CH -		Ch -

**Originalfernbedienung Ersatzfernbedienung**