




















































 










 
 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	TTX/MIX		Text / Goto
	0		0
	PRE-CH		Fav / Marker / PC
	Vol+		Vol+
	Mute		Mute / Dimmer
	CH+		CH+ / Page+

Originalfernbedienung Ersatzfernbedienung

	Vol-		Vol-
	CH List		Smart / List
	CH-		CH- / Page-
	Netflix		Shift + Red / Netflix /
	Home		Menu / Home
	prime video		Shift + Blue / Prime
	Samsung TV		TV/Radio /
	Up		Up
	Disney+		Picture / Format
	Left		Left
	Enter		OK
	Right		Right
	Return		Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat





**Originalfernbedienung**   **Ersatzfernbedienung**

	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Settings		Setup / OPT /
	Info		Info / Angle
	AD/SUBT.		Subtitle / EQ
	Stop		Stop / Hold
	<<		<< / Tune-
	l<<		l<< / Preset-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	>>l		>>l / Preset+

**Originalfernbedienung**   **Ersatzfernbedienung**