


















 

 













Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Sleep		Sleep / Timer
	Screen		Picture / Format
	Presets		Setup / OPT /
	↔		TV/Radio /
	FAV		Shift + Fav / Marker / PC
	Lang		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	TXT		Text / Goto
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8

Originalfernbedienung Ersatzfernbedienung

	9		9
	EPG		Guide / EPG / -/-
	0		0
	Swap		Fav / Marker / PC
	Photo/Music/Movi		D.Menu / Top
	World		Smart / List
	Source		AV / Input / RDS
	Menu		Menu / Home
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	C		Exit / Cancel / Clear
	Disp.		Display / Media
	Search Mode		Shift + Red / Netflix /
	Return		Back / Return





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	CH+		CH+ / Page+		Yellow/Root		Yellow / YouTube / Repeat
	Info		Info / Angle		Blue/Title		Blue / Prime Video / Random
	Vol+		Vol+				
	CH-		CH- / Page-				
	Mute		Mute / Dimmer				
	Vol-		Vol-				
	Rec		Rec / Rec Mode				
	Pause		Pause / Step / Freeze				
	I<<		I<< / Preset-				
	>>I		>>I / Preset+				
	<<		<< / Tune-				
	Play		Play / Slow				
	Stop		Stop / Hold				
	>>		>> / Tune+				
	Red/↑/Zoom		Red / Netflix / Search				
	Red/↑/Zoom		Zoom / Size				
	Green/↓/Repeat		Green / APP / Repeat				

