



Originalfernbedienung Ersatzfernbedienung

ON/STAND-BY I/O	On/Standby	Power	Power
AUTO SET	Auto Set	Auto	Auto
COMF 1	Computer 1	Shift + Mode	Shift + Mode
'UTER 2	Computer 2	Shift + Auto	Shift + Auto
HDMI	HDMI	Focus Volt	Volt / Focus
VIDEO	Video	Shift + Video Comp	Shift + Comp / Video
S-VIDEO	S-Video	Mode	Mode
COMPONENT	Component	Video Comp	Comp / Video
▲	Up	▲	Up
▼	Down	▼	Down
▶	Right	▶	Right
◀	Left	◀	Left
SELECT	Select	Enter	Enter
MENU	Menu	Menu	Menu
SCREEN	Screen	Shift + Focus Volt	Shift + Volt / Focus
KEYSTONE	Keystone	Shift + ▲	Shift + Up
LAMP	Lamp	Shift + Aspect Eco	Shift + Eco / Aspect

Originalfernbedienung Ersatzfernbedienung

INFO.	Info	Info Help	Help / Info
FREEZE	Freeze	Timer Freeze	Freeze / Timer
NO SHOW	No Show	Source	Source
P-TIMER	p-Timer	Shift + Timer Freeze	Shift + Freeze / Timer
IMAGE	Image	Invert 3D	3D / Invert
ASPECT	Aspect	Aspect Eco	Eco / Aspect
D.ZOOM ▲	D.Zoom+	Play +	+ / Play
D.ZOOM ▼	D.Zoom-	Stop -	- / Stop
VOLUME +	Vol+	Page▲ Vol	Vol + / Page +
VOLUME -	Vol-	Page▼ Vol	Vol - / Page -
MUTE	Mute	Mute Blank	Blank / Mute

