


 



 
 


 



 



 



 

 











 

 














 


 

 



 

 
 
 
 
 





 
 








 
 




Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Power		Power		4		4
	Source		AV		5		5
	Rec		Rec		6		6
	Play		Play		7		7
	Pause		Pause		8		8
	Stop		Stop		9		9
	Lang		Dual		0		0
	<<		<<		Tv		TV/R
	>>		>>		Back		Shift + Back
	Text		Text		Up		Up
	Red		Red		Down		Down
	Green		Green		Right		Right
	Yellow		Yellow		Left		Left
	Blue		Blue		OK		Ok
	1		1		Menu		Menu
	2		2		Exit		Exit
	3		3		BACK		Back





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
 Q.Menu	 D. Menu		
 O	 Options		
 Music/Photo	 Eject		
 */o	 Subt		
 */Search	 Sleep		
 Tv List	 List		
 i	 Info		
 [≡]	 Guide		
 Size	 Format		
 Vol+	 Vol +		
 Vol-	 Vol -		
 P+	 Ch +		
 P-	 Ch -		
 Mute	 Mute		

